

Specification


Product Name	Facial Steamer Hot & Cold Mist
Product Model	ZC-STE-11054
Key Benefits	Skin Hydrating, Deep Cleansing, Pore Tightening
Power Source	Corded Electric
Rated Voltage	110-220V
Rated Power	280W
Steam Temperature	Up to 45° C
Included Components	Facial Steamer, Electric Cord
Product Weight	600 g
Product Dimension	13 (D) x 13 (W) x 18 (H) cm

Zeencare

FACIAL STEAMER HOT & COLD MIST



Features

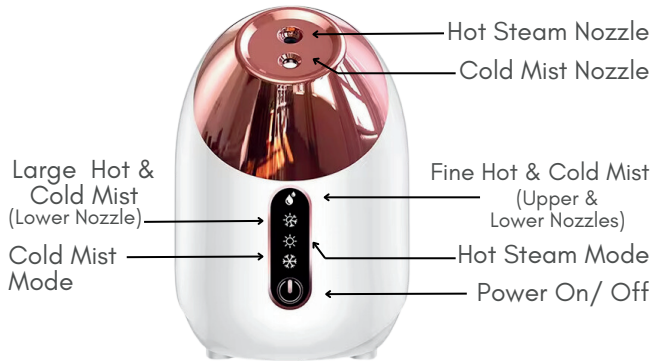

BENEFITS OF FACIAL STEAMER:

❄️ Cold Mist

- Soothes irritated skin
- Reduces puffiness and inflammation
- Tightens pores for a refreshed look

☀️ Hot Steam

- Deeply hydrates and moisturizes skin
- Opens pores to cleanse impurities
- Enhances blood circulation for a healthy glow

❄️ Hot Steam and Cold Mist Combination:

- Balances skin temperature for optimal care
- Improves product absorption (e.g., serums)
- Stimulates skin rejuvenation for a smoother texture

How to Use

Step 1. Fill the tank with distilled or purified water to prolong the product's lifespan.



Step 2. Power On

Step 3. Select your preferred steam mode (cold, hot, or combination)

Step 4. Wait about 30 seconds for the steam to start.

Step 5. Position the steamer nozzle at least 20 cm from your face to ensure full facial coverage.

Step 6. If the steam changes, the water level is low.

Step 7. After use, turn off the steamer, unplug it, and apply moisturizer if desired.

Step 8. Empty the water tank and dry it to prevent dirt or residue buildup.